

EVE

OPERATION MANUAL

MICRO COMBI OVEN

ORIS 45CM

Ú Table of contents

| | | | |
|---|----|---|----|
| Important safety information | 3 | MicroCombi operation | 18 |
| Causes of damage | 6 | Setting Microwave Combi operation..... | 18 |
| Installation | 6 | Automatic programmes | 18 |
| Your new appliance | 8 | Setting a programme..... | 18 |
| Control panel..... | 8 | Defrosting programmes..... | 19 |
| Touch keys and display | 8 | Setting the pre-set cooking | 20 |
| Function and screen display..... | 8 | Setting the time-setting options | 20 |
| Parameter adjustment..... | 8 | Setting the cooking time..... | 20 |
| Cooling fan | 9 | Setting the clock..... | 20 |
| Accessories | 9 | Setting the timer | 20 |
| Before using the appliance for the first time | 16 | Childproof lock | 20 |
| Setting the clock..... | 16 | Switching on the childproof lock..... | 20 |
| Heating up the oven | 16 | Switching off the childproof lock..... | 20 |
| Cleaning the accessories..... | 16 | Care and cleaning | 21 |
| Setting the oven | 16 | Cleaning agents..... | 21 |
| Setting the type of heating and temperature..... | 16 | Technical data..... | 21 |
| Rapid preheating..... | 17 | Malfunction table | 22 |
| The microwave | 17 | Acrylamide in foodstuffs | 22 |
| Notes regarding ovenware | 17 | Energy and environment tips | 23 |
| Microwave power settings | 17 | Saving energy..... | 23 |
| Setting the microwave..... | 18 | Environmentally-friendly disposal | 23 |

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
2. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
3. Keep the appliance and its cord out of reach of children less than 8 years.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. (For appliance with type Y attachment)
5. **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
6. **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.
7. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision unless they are aged from 8 years and above and supervised.
8. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
9. Only use utensils that are suitable for use in microwave ovens.
10. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
11. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
12. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

13. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.

14. The oven should be cleaned regularly and any food deposits removed.

15. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

16. Only use the temperature probe recommended for this oven. (for ovens provided with a facility to use a temperature-sensing probe.)

17. The microwave oven must be operated with the decorative door open. (for ovens with a decorative door.)

18. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- by clients in hotels, motels and other residential type environments;
- farm houses;
- bed and breakfast type environments.

19. Care should be taken not to displace the turntable when removing containers from the appliance. (For fixed appliances and built-in appliances being used equal or higher than 900mm above the floor and having detachable turntables. But this is not applicable for appliances with horizontal bottom hinged door.)

20. The appliance shall not be cleaned with a steam cleaner.

21. **WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

22. **WARNING:** Accessible parts may become hot during use. Young children should be kept away.

23. Steam cleaner is not to be used.

24. The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.

25. Surface of a storage drawer can get hot.

26. **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.

27. During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.

28. Metallic containers for food and beverages are not allowed during microwave cooking.

29. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

30. The appliance is intended to be used built-in.

31. The appliance must not be installed behind a decorative door in order to avoid

overheating. (This is not applicable for appliances with decorative door.)

32. **WARNING:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Causes of damage

Caution!

- Creation of sparks: Metal e.g. a spoon in a glass must be kept at least 2 cm from the oven walls and the inside of the door. Sparks could irreparably damage the glass on the inside of the door.
- Water in the hot cooking compartment: Never pour water into the hot cooking compartment. This will cause steam. The temperature change can cause damage.
- Moist food: Do not store moist food in the closed cooking compartment for long periods.
Do not use the appliance to store food. This can lead to corrosion.
- Cooling with the appliance door open: Only leave the cooking compartment to cool with the door closed. Do not trap anything in the appliance door. Even if the door is only slightly ajar, the fronts of adjacent units may be damaged over time.
- Heavily soiled seal: If the seal is very dirty, the appliance door will no longer close properly during operation. The fronts of adjacent units could be damaged. Always keep the seal clean.
- Operating the microwave without food: Operating the appliance without food in the cooking compartment may lead to overloading. Never switch on the appliance unless there is food in the cooking compartment. An exception to this rule is a short crockery test (see the section "Microwave, suitable crockery").
- Using the appliance door for standing on or placing objects on: Do not stand or place anything on the open appliance door. Do not place ovenware or accessories on the appliance door.
- Transporting the appliance: Do not carry or hold the appliance by the door handle. The door handle cannot support the weight of the appliance and could break.
- Microwave popcorn: Never set the microwave power too high. Use a power setting no higher than 600 watts. Always place the popcorn bag on a glass plate. The disc may jump if overloaded.
- Liquid that has boiled over must not be allowed to run through the turntable drive into the interior of the appliance. Monitor the cooking process. Choose a shorter cooking time initially, and increase the cooking time as required.
- The oven should be cleaned regularly and any food deposits removed since they may explode, even after microwave heating has ended.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

Installation


Fitted units

- This appliance is only intended to be fully fitted in a kitchen.
- This appliance is not designed to be used as a tabletop appliance or inside a cupboard.
- The fitted cabinet must not have a back wall behind the appliance.
- A gap of at least 45 mm must be maintained between the wall and the base or back panel of the unit above.
- The fitted cabinet must have a ventilation opening of 250 cm² on the front. To achieve this, cut back the base panel or fit a ventilation grille.
- Ventilation slots and intakes must not be covered.
- The safe operation of this appliance can only be guaranteed if it has been installed in accordance with these installation instructions.
- The fitter is liable for any damage resulting from incorrect installation.
- The units into which the appliance is fitted must be heat-resistant up to 90 °C.
- Installation height not less than 850mm .

Installation dimensions

Ventilation openings


behind, min. 250 cm²

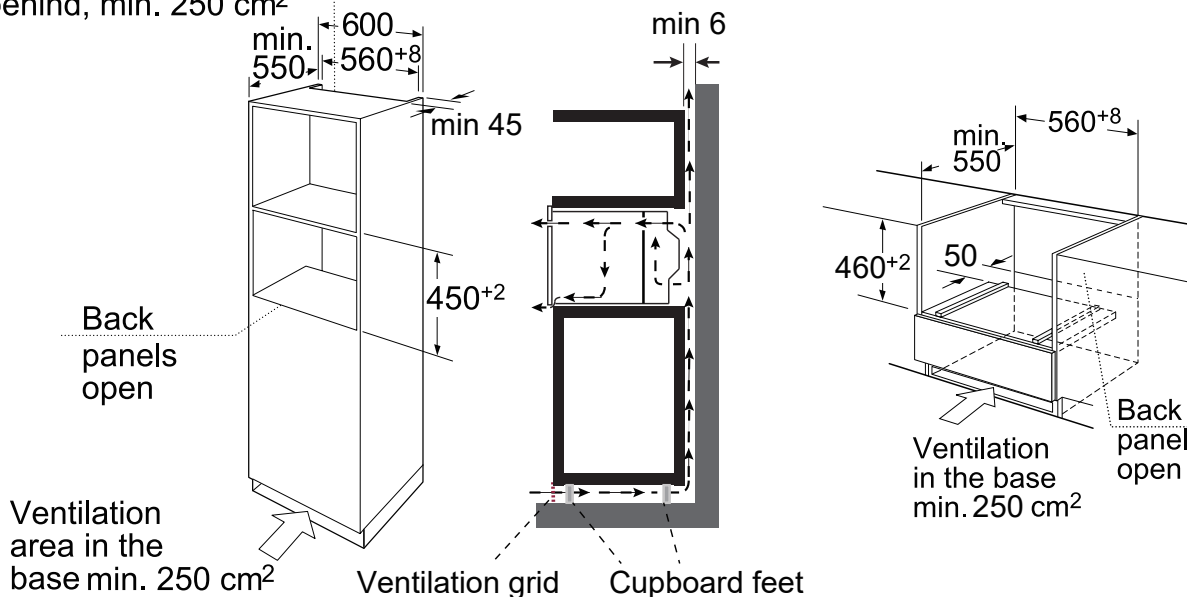

Note: There should be gap above the oven.

Building in

- Do not hold or carry the appliance by the door handle. The door handle cannot hold the weight of the appliance and may break off.
1. Carefully push the microwave into the box, making sure that it is in the centre.
 2. Open the door and fasten the microwave with the screws that were supplied.

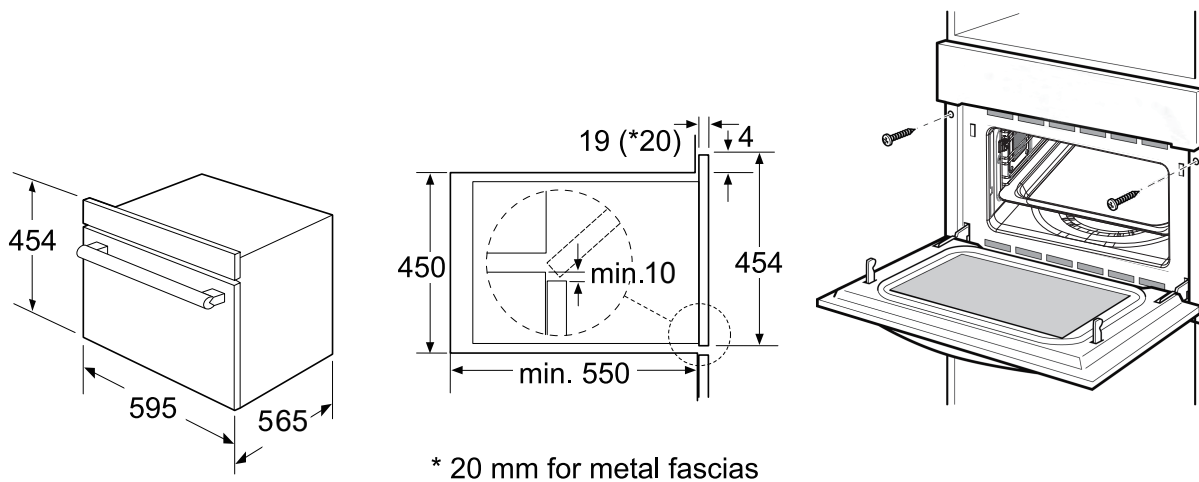

- Fully insert the appliance and centre it.
- Do not kink the connecting cable.
- Screw the appliance into place.
- The gap between the worktop and the appliance must not be closed by additional battens.

Important information

The appliance is designed to be permanently installed with a three-pin power cord and may only be connected by a licensed expert in accordance with the connection diagram.

Only a qualified electrician who takes the relevant regulations into account may replace the power cord.

Do not use multiple plugs, power strips or extensions. Overloading causes a risk of fire.

If the connection is no longer accessible following installation, an all-pin isolating switch with a contact gap of at least 3 mm must be provided.

Connect the wires of the mains power cord in accordance with the following colour coding:

Green and yellow Earth wire < (E)

Blue Neutral wire (N)

Brown Live (L)

Great Britain and Australia:


Do not connect the appliance using a 13 A plug or protect it with a 13 A fuse. The appliance must be protected using a fuse that is rated 16 A or higher. The appliance must be disconnected from the power supply during all installation work. When the appliance is installed, protection must be provided against accidental contact in the future.

Your new appliance

Use this section to familiarise yourself with your new appliance. The control panel and the individual operating controls are

explained. You will find information on the cooking compartment and the accessories.

Control panel

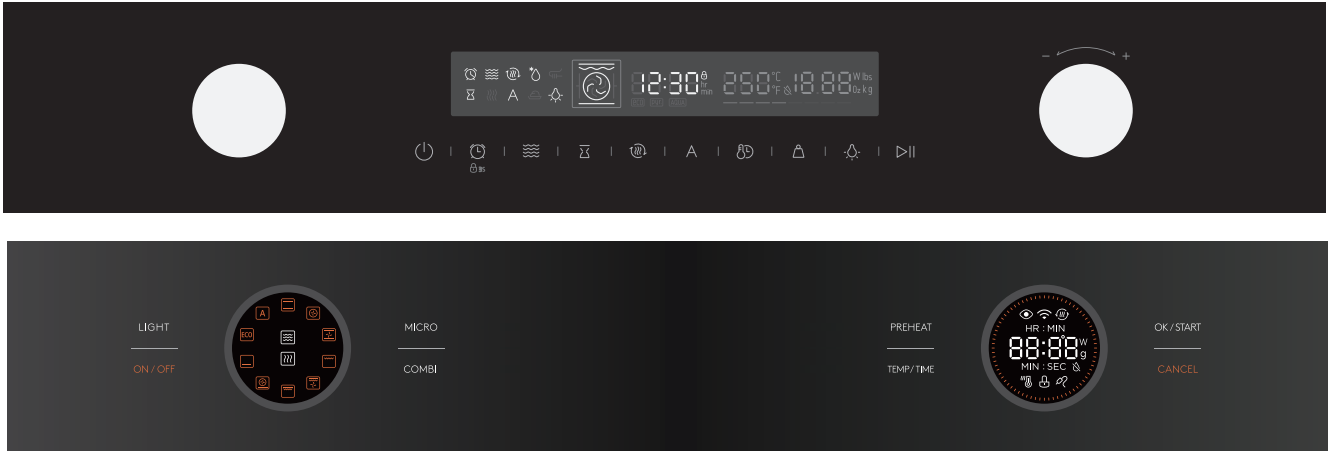

Function and screen display

Use the function knob(the left knob) to set the type of cooking.

| Function | Use |
|--------------------|---|
| Conventional | The top and bottom elements work together to provide conventional cooking. The oven needs to be pre-heated to the required temperature: ideal for slow cooking dishes such as casseroles and stews. |
| Convection | For baking on several levels(e.g. baking trays of chocolate chip cookies). |
| Conventional + Fan | Convenient and time savings, up to 4 dishes can be cooked simultaneously on different shelves without mixing of taste or smell. |
| Radiant Grilling | Best results can be obtained from using the top shelf for small items and lower shelves for larger items. |
| Double Grill+Fan | For gratin dishes and finishing roasted vegetables. |
| Double Grilling | The inside radiant elements and outside top element work simultaneously giving a rapid and even grilling heat, therefore effectively browning the top surface of the food. |
| Pizza | Pizza is perfectly cooked with extra heat from both bottom and sides of the oven, guaranteeing pizza bases are crispy. |

| | |
|----------------------|---|
| Lower Heater Element | This is ideal for slow cooking dishes such as casseroles, stews. |
| Microwave | Defrost, reheat and cooking. |
| MW+Convection | For reducing large portions' cooking time with browning finish. |
| MW+Double Grill +Fan | This function is suitable where quick browning is required; will cook the ingredients down to the core. |
| MW+Pizza | This function is suitable where quick under browning is required; will cook the ingredients down to the core. |
| Defrost | 3 defrosting programmes |
| Auto-programms | 13 cooking programmes The type of heating and cooking time are set by weight . |

Parameter adjustment

Use the parameter knob(the right knob) to set the parameters.

| parameter | function |
|-------------|---|
| Auto menu | Select 13 automatic programmes. From P 01 to P 13. |
| Temperature | Select the temperature of cooking(°C). |
| | 100-235 : 235-500 |
| | 50-250 : 235-500 |
| | 50-235 : 235-500 |
| | 100-235 : 235-500 |
| Weight | Set the weight of cooking. |
| Time | Set the time of cooking. |
| Microwave | Select microwave power. 100W, 300W, 500W, 700W and 900W |

Cooling fan

Your appliance has a cooling fan. The cooling fan switches on during operation. The hot air escapes above the door.

The cooling fan continues to run for a certain time after operation.

Caution!

Do not cover the ventilation slots. Otherwise, the appliance will overheat.

Notes


- The appliance remains cool during microwave operation. The cooling fan will still switch on. The fan may run on even when microwave operation has ended.
- Condensation may appear on the door window, interior walls and floor. This is normal and does not adversely affect microwave operation. Wipe away the condensation after cooking.

Accessories

Note:

Type and quantity of accessories is subject to actual demand.

Grill rack

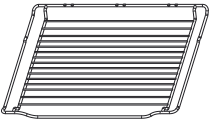


For grilling, e.g. steaks, sausages and for toasting bread.

Baking tray

For safety reasons, the baking tray should be placed on the side hanger instead of being placed directly on the bottom board of the cavity.


Baking tray- Enamel tray

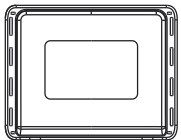





For making cake roll, roasting whole chickens.


- When cooking with microwave function, the use of enamel tray is prohibited.

Baking tray- Glass tray

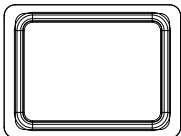

- When cooking with microwave function, please use the glass tray.
- Used for catching liquids, such as water and grease when food is baked.
- In order to ensure the best cooking effect, the glass tray should be placed in the bottom of the side hanger, as shown in the figures below, the glass tray should be pushed along the lowest guide rails of the side hanger in place.

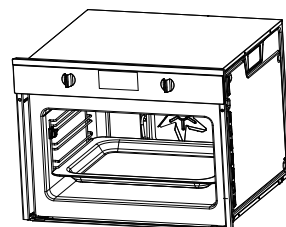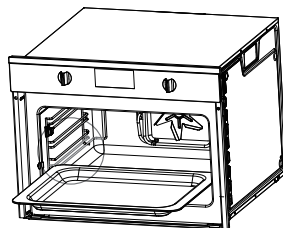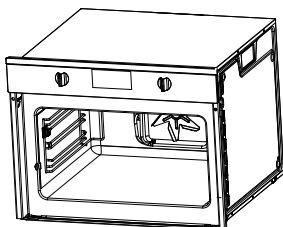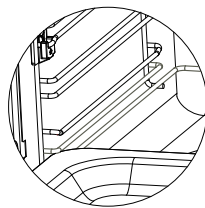


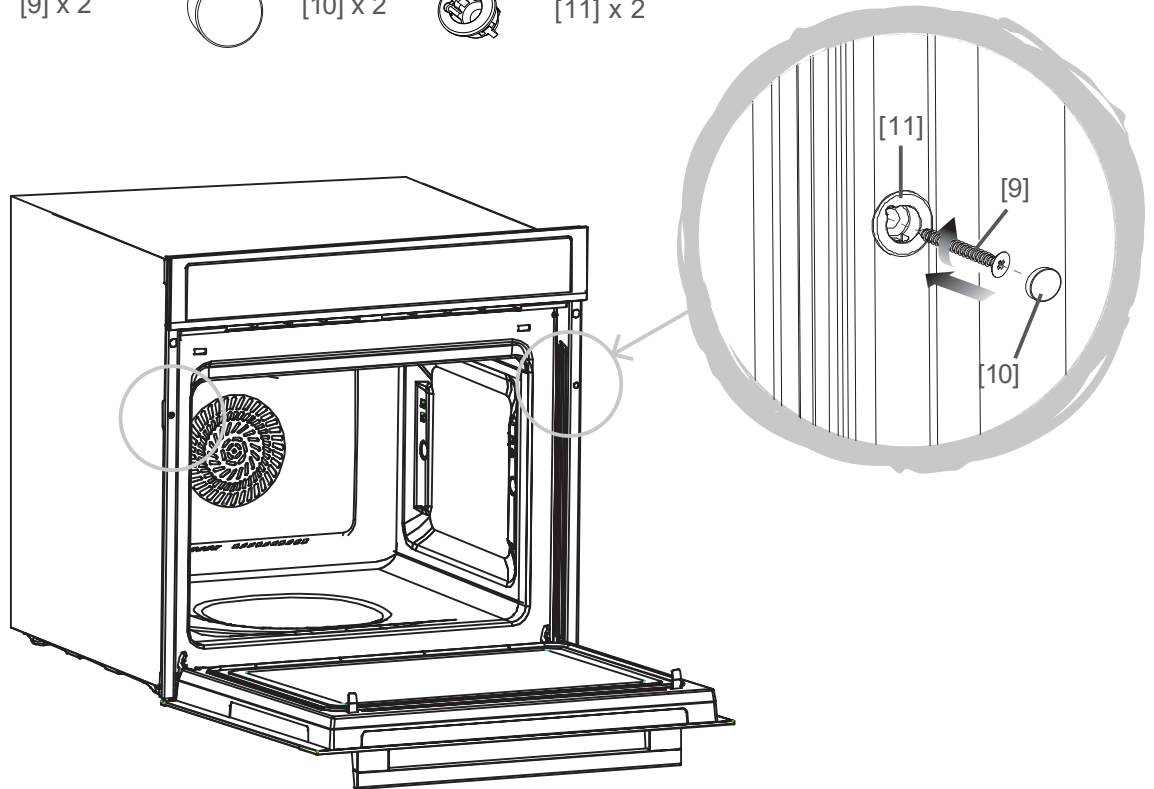


Once the oven has been lifted into place inside the appliance housing, locate the two holes in the casing of the oven and fix it into place using [08], [09] and [10].

Caution: Do not over tighten the screws [08] to avoid damage to the oven or appliance housing - use a screwdriver only!


Installation of the ceramic clips and side rails

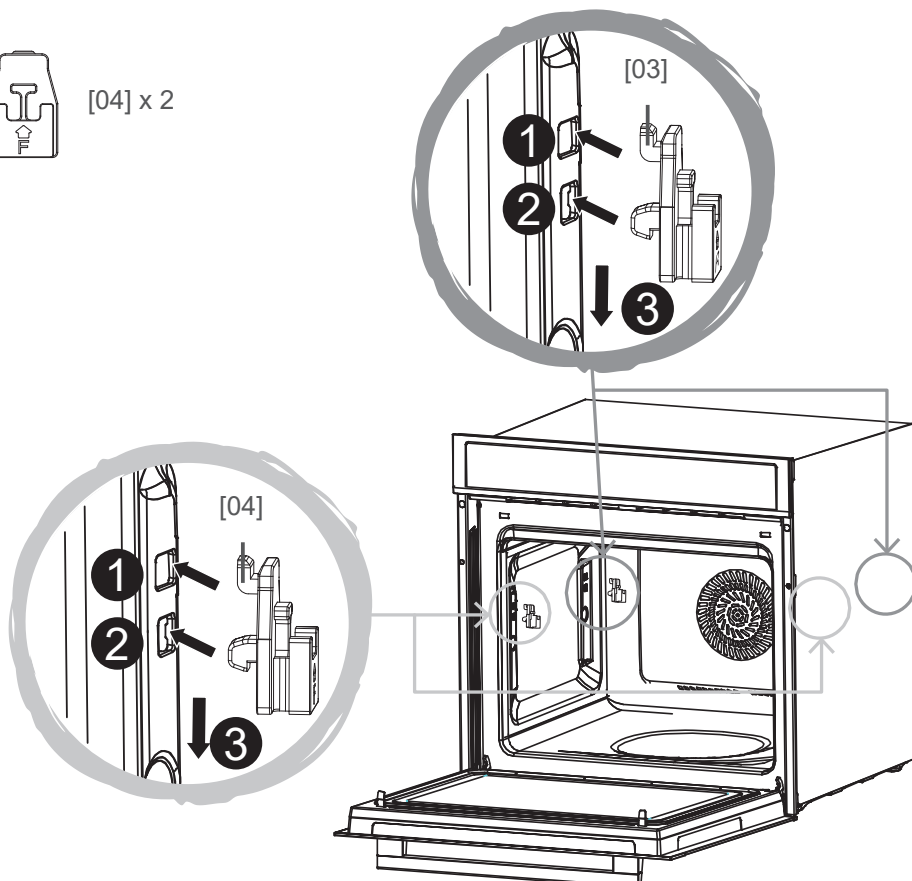

Left side rail installation [05]

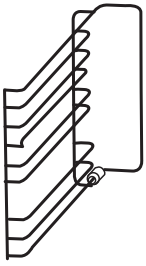


[05] x 1

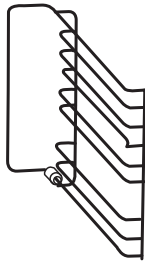


[06] x 1

[04]


[03]

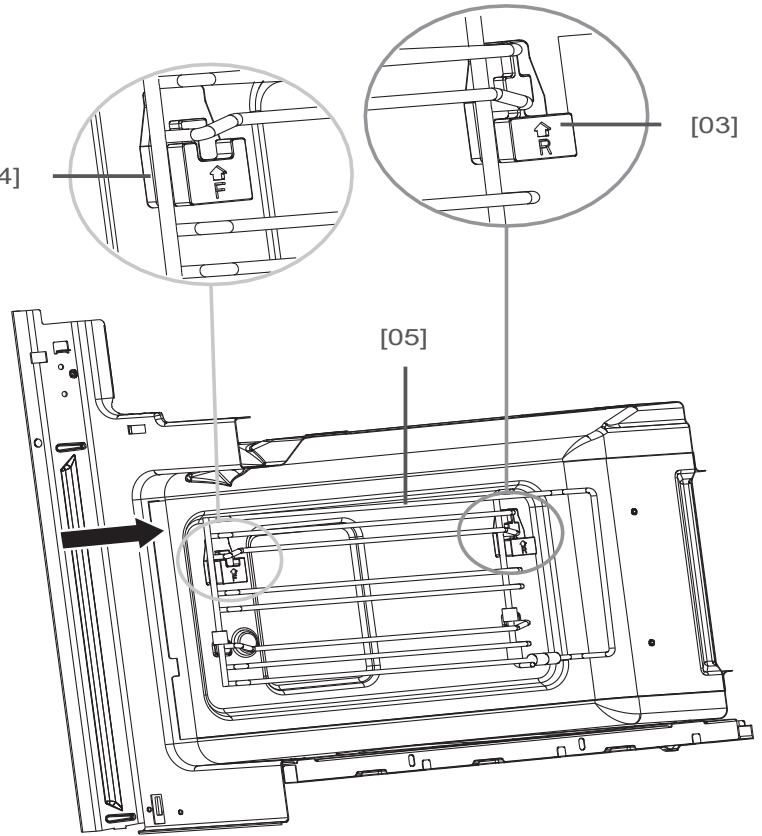

[05]

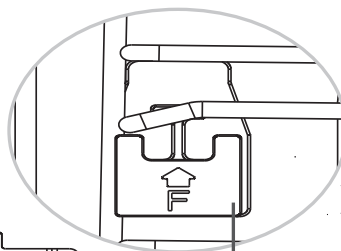



[04]

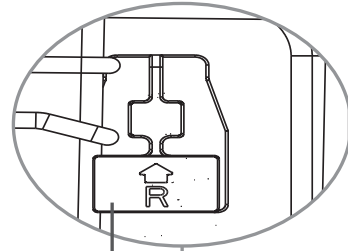


[03]







[05]

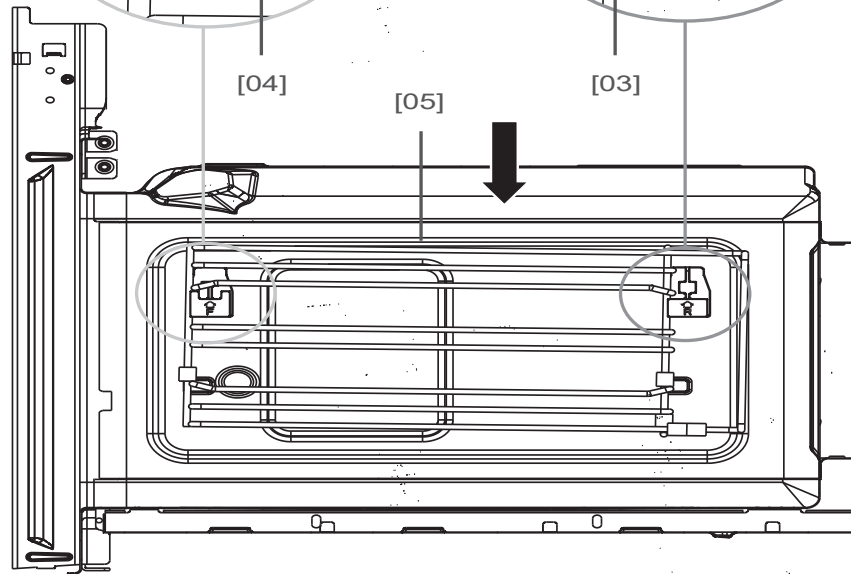

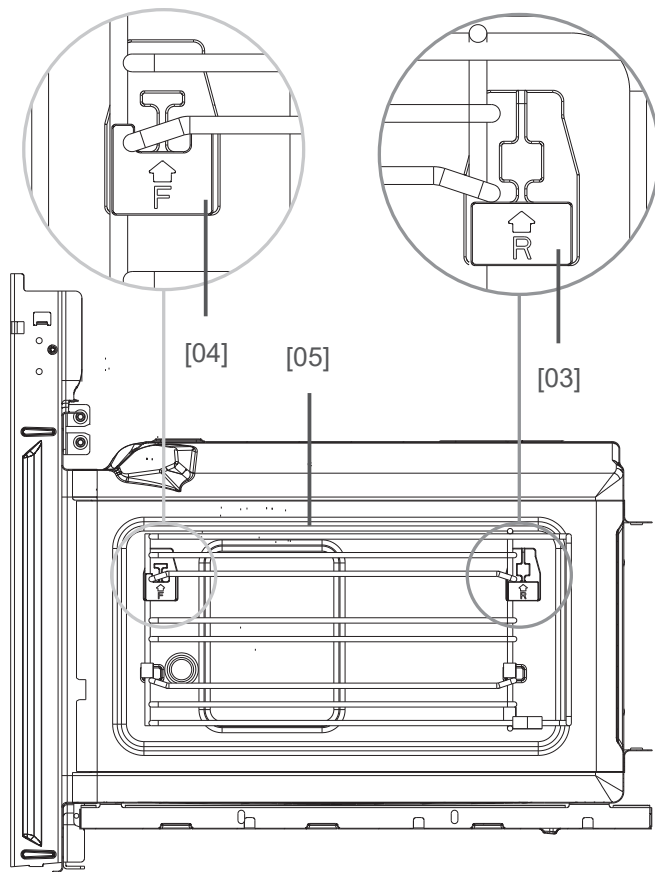

Right side rail installation [06]

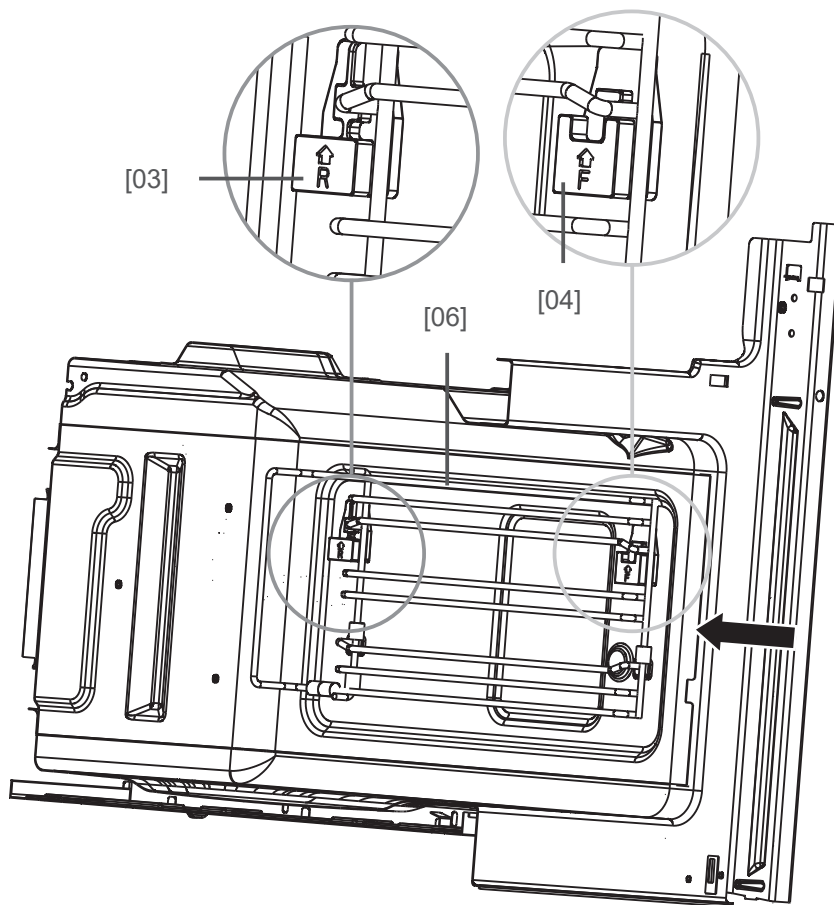

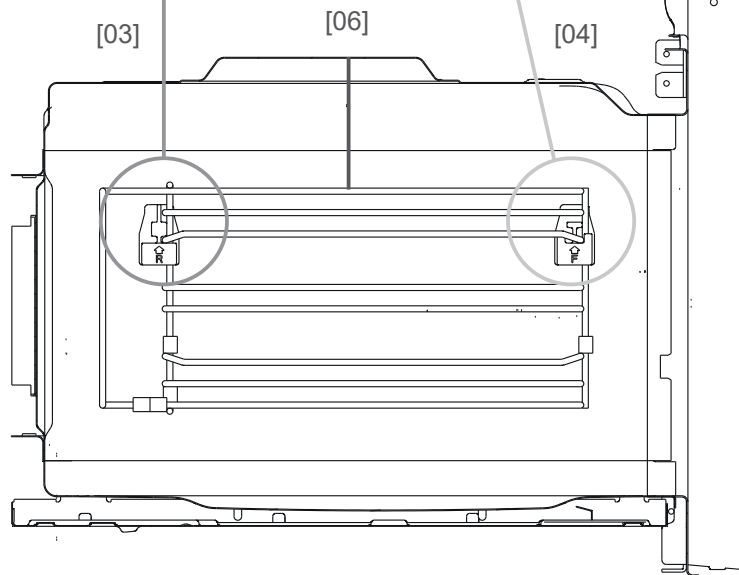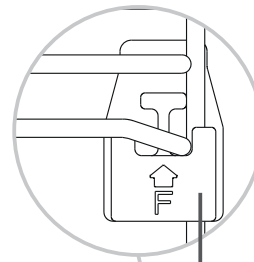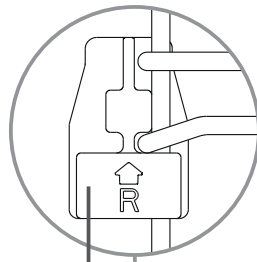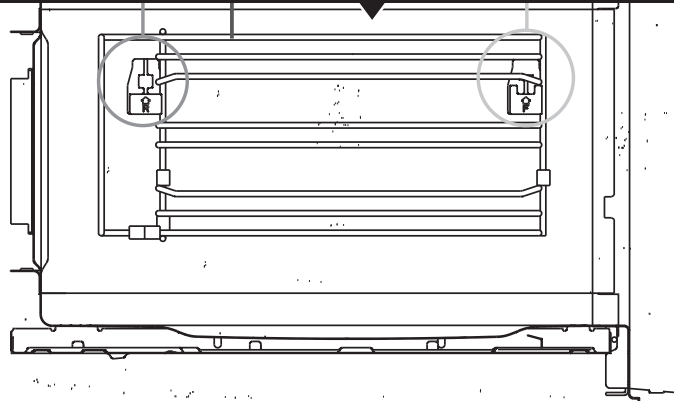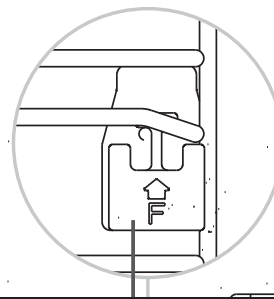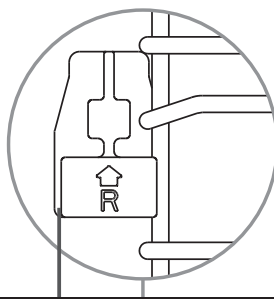


Instructions for the control box knob (For some models)(P14-P15)

1) Knob stretch out :

Only when the knob protrudes from the outside surface of the glass can it be rotated for use, so before using, press the knob first, let the knob extend the glass hole.


2) Knob retreat into:

After use, press the knob to indent the glass hole. Note that only when the vertical bar of the knob is in the right direction can the knob enter the glass hole.

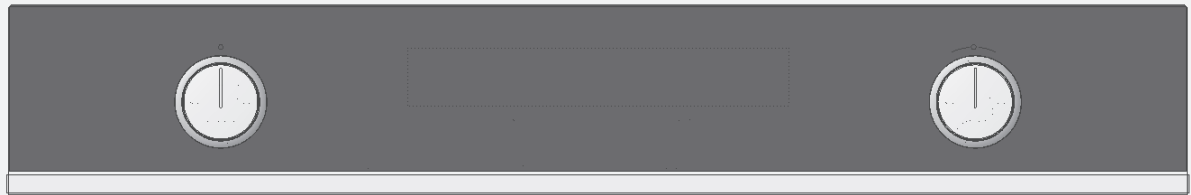


1) Knob stretch out:

Before using, press the knob first, let the knob extend the glass hole.

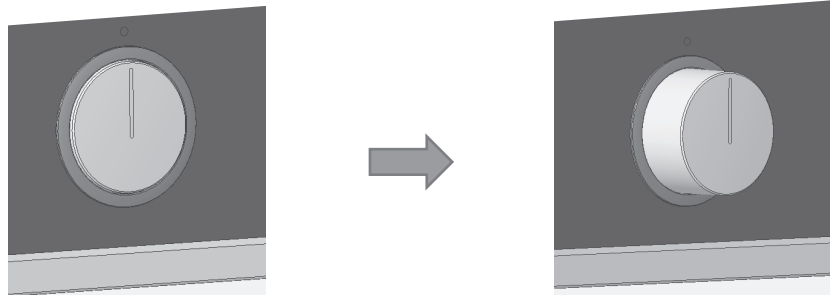


2) Knob retreat into:

After use, press the knob to indent the glass hole.

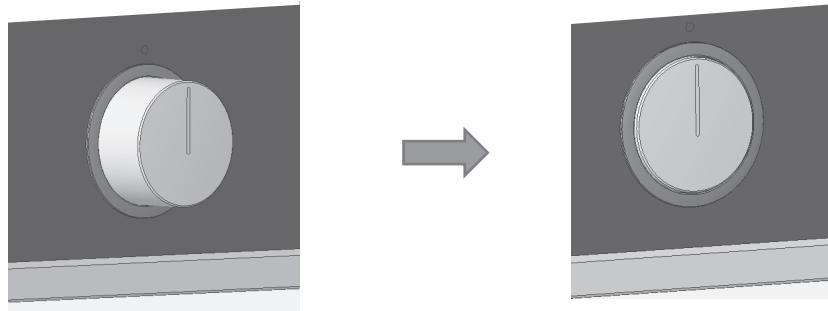


Pay attention to the knob direction:

Only when the vertical bar of the knob is pressed in the right direction can the knob enter the glass hole.

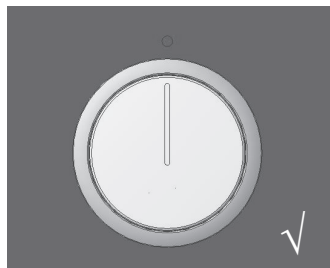

Right

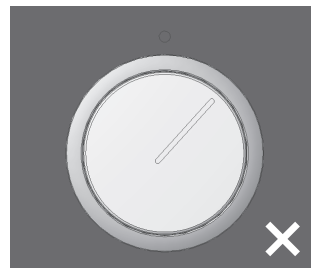

Wrong

Before using the appliance for the first time

Here you will find everything you need to do before using your oven to prepare food for the first time. First read the section on *Safety information*.

Setting the clock

1. In waiting state, touch the "TEMP/TIME" key to enter clock setting mode. "00:00" will display and the hour figures will flash.
2. Turn the parameter knob to set the hour figures. The input time should be within 0--23.
3. Touch "TEMP/TIME" to confirm, the minute figures will flash.
4. Turn the parameter knob to set the minute figures. The input time should be within 0--59.
5. Touch "TEMP/TIME" to finish clock setting, ":" will flash.

The time is set. And the appliance will enter waiting state.

Cleaning the accessories


Before you use the accessories for the first time, clean them thoroughly with hot soapy water and a soft dish cloth.

Setting the oven


There are various ways in which you can set your oven. Here we will explain how you can select the desired type of heating and temperature or grill setting. You can also select the oven cooking time for your dish. Please refer to the section on *Setting the time-setting options*.


Setting the type of heating and temperature

Example :  Radiant Grilling at 200 °C for 25 minutes.

1. In waiting state, turn the function knob repeatedly till  light. And the default temperature of radiant grilling will display.
2. Turn the parameter knob to set the temperature to 200° C.
3. Touch "TEMP/TIME" to enter cooking time setting mode. "00:00" will flash.
4. Turn the parameter knob to set the cooking time to 25 minutes.
5. Touch the "OK/START" key. The oven begins to heat up.

Heating up the oven

To remove the new cooker smell, heat up the oven when it is empty and closed. One hour with  Convection at 250 °C is ideal. Ensure that no packaging remnants have been left in the cooking compartment.

1. In waiting state, turn the function knob repeatedly till  light. And the default temperature of convection will display.
2. Turn the parameter knob to set the temperature to 250° C.
3. Touch "TEMP/TIME" to enter cooking time setting mode. "00:00" will flash.
4. Turn the parameter knob to set the cooking time to 60 minutes.
5. Touch the "OK/START" key. The oven begins to heat up.

Opening the oven door during operation

Operation is suspended. After closing the door, touch the "OK/START" key. Operation continues.

Pausing operation

Touch the "OK/START" key to pause operation. Then touch the "OK/START" key to continue operation.

Changing the cooking time

This can be done at any time. Touch the "TEMP/TIME" key repeatedly till the cooking time flashes, and turn the parameter knob to change the cooking time.

Changing the temperature

This can be done at any time. Touch the "TEMP/TIME" key repeatedly till the temperature flashes. Then turn the parameter knob to change the temperature.

Cancelling operation

This can be done at any time. Touch the "OK/START" key to enter into the waiting state.

Rapid Preheating

With rapid preheating, your oven reaches the set temperature particularly quickly.

Rapid Preheating is available for the following types of heating:

- | | |
|--|--|
| ▪  Conventional | ▪  Double Grill+Fan |
| ▪  Convection | ▪  Double Grilling |
| ▪  Conventional + Fan | ▪  Pizza |
| ▪  Radiant Grilling | ▪  Lower Heater Element |

To ensure an oven cooking result, only put your food in the cooking compartment when the preheating phase is complete.

1. Setting the type of heating and temperature.

2. Touch the "PREHEAT" key.

The "PREHEAT" symbol lights up in the display.

The oven begins to heat up.

The preheating process is complete

A signal sounds. The "PREHEAT" symbol in the display blinks.

Put your dish in the oven.

Canceling rapid preheating

During setting the rapid preheating function, touch the "OK/START" key can cancel the function.

During rapid preheating, touch the "OK/START" can cancel the function.

Note: Only when you can hear alarm and preheating icon is blinking you can open the door and put food inside.

The microwave

Microwaves are converted to heat in foodstuffs. The microwave can be used solo, i.e. on its own, or in combination with a different type of heating. You will find information about ovenware and how to set the microwave.

Note:

The step quantities for the adjustment time of the coding switch are as follow:

- | | | | |
|---------|-----|---|-----------|
| 0-1 | min | : | 5seconds |
| 1-3 | min | : | 10seconds |
| 3-15 | min | : | 30seconds |
| 15-60 | min | : | 1minute |
| Over 60 | min | : | 5minutes |

Notes regarding ovenware

Suitable ovenware

Suitable dishes are heat-resistant ovenware made of glass, glass ceramic, porcelain, ceramic or heat-resistant plastic. These materials allow microwaves to pass through.

You can also use serving dishes. This saves you having to transfer food from one dish to another. You should only use ovenware with decorative gold or silver trim if the manufacturer guarantees that they are suitable for use in microwaves.

Unsuitable ovenware

Metal ovenware is unsuitable. Metal does not allow microwaves to pass through. Food in covered metal containers will remain cold.

Caution!

Creation of sparks: metal – e.g. a spoon in a glass – must be kept at least 2 cm from the oven walls and the inside of the door. Sparks could destroy the glass on the inside of the door.

Ovenware test

Do not switch on the microwave unless there is food inside. The following ovenware test is the only exception to this rule.

Perform the following test if you are unsure whether your ovenware is suitable for use in the microwave:

1. Heat the empty ovenware at maximum power for ½ to 1 minute.

2. Check the temperature occasionally during that time.

The ovenware should still be cold or warm to the touch.

The ovenware is unsuitable if it becomes hot or sparks are generated.

Microwave power settings

Use the "MICRO" key to set the desired microwave power.

| | |
|-------|---|
| 100W | -Defrosting sensitive/delicate foods -Defrosting irregularly-shaped foods -Softening ice cream -Allowing dough to rise |
| 300 W | -Defrosting -Melting chocolate and butter |
| 500 W | -cooking rise , soup |
| 700 W | -Reheating -cooking mushrooms, shell fish -cooking dishes containing eggs and cheese |
| 900 W | -Boiling water, reheating -cooking chicken, fish, vegetables |

Notes

- When you touch a key, the selected power lights up.
- The microwave power can be set to 900 watts for a maximum of 30 minutes. With all other power settings a maximum cooking time of 1 hour 30 minutes is possible.

Setting the microwave

Example: Microwave power setting 300 W, cooking time 17 minutes

1. In waiting state, touch the "MICRO" key to enter microwave function. The default microwave power 900W will appear. And the default cooking time will flash.
2. Turn the parameter knob to adjust the cooking time to 17 minutes.
3. Touch the "MICRO" key to activate the microwave power. Turn the parameter knob to adjust the microwave power to 300W.
4. Touch the "OK/START" key.

Operation begins. The cooking time starts counting down in the display.

The cooking time has elapsed

A signal sounds. Microwave operation has finished.

Opening the oven door during operation

Operation is suspended. After closing the door, touch the "OK/START" key. Operation continues.

Changing the cooking time

This can be done at any time. Touch the "TEMP/TIME" key and then turn the parameter knob to change the cooking time.

Changing the microwave power setting

This can be done at any time. Touch the "MICRO" key and then turn the parameter knob to change the cooking time.

Pausing operation

Touch the "OK/START" key briefly. The oven is paused. Touch the "OK/START" key again to continue operation.

Cancelling operation

This can be done at any time. Touch the "CANCEL" key to enter into the waiting state.

Notes

- If you open the appliance door during cooking, the fan may continue to run.

 

MicroCombi operation



This involves simultaneous operation of the grill and the microwave. Using the microwave makes your dishes ready more quickly, but they are still nicely browned.

You can switch on all microwave power settings.

Exception: 700 and 900 watts

Setting Microwave Combi operation

Example:  +  MW+Pizza function with 500 W and 190° C for 17 minutes.

1. In waiting state, touch "MICRO" key, and then use the function selector to set MicroCombi mode. Stop turning when  and  display in the screen. The default microwave power will display and the default temperature will flash.
2. Turn the parameter knob to set the temperature to 190°C .
3. Touch the "TEMP/TIME" key to confirm the temperature. The default cooking time will flash, and then turn the parameter knob to set the cooking time to 17 minutes.
4. Touch the "MICRO" key. The default power 300W will blink. Turn the parameter knob to set the microwave power to 500W .

5. Touch the "OK/START" key. The oven begins to heat up. Appliance operation begins. The cooking time starts counting down.

The cooking time has elapsed

A signal sounds. Combination mode has finished.

Opening the oven door during cooking

Operation is suspended. After closing the door, touch the "OK/START" key briefly. The programme will then continue.

Pausing operation

Touch the "OK/START" key briefly. The oven is paused. Touch the "OK/START" key again to continue operation.

Changing the cooking time

This can be done at any time. Touch the "TEMP/TIME" key repeatedly till the cooking time flashes, and turn the parameter knob to change the cooking time.

Changing the microwave power setting

This can be done at any time. Touch the "MICRO" key and then turn the parameter knob to change the cooking time.

Changing the temperature

This can be done at any time.

Touch the "TEMP/TIME" key repeatedly till the temperature flashes. Then turn the parameter knob to change the temperature.

Cancelling operation

This can be done at any time. Touch the "CANCEL" key to enter into the waiting state.

Auto menu

1. In waiting state, turn the knob left, "d-01" will display.
2. Turn the knob right to choose the menu, "d-01 ~d-03" ... "P-01~P-13" will display in order.
3. Touch the "OK/START" key to confirm the menu.

4. Turn the knob right to set the weight of the menu.

5. Touch the "OK/START" key to start cooking.

Auto Menu

| Programme no. | Item | Weight(g) |
|---------------|------------------------|-----------|
| P 01** | Fresh vegetables | 200 |
| | | 400 |
| | | 600 |
| P 02** | Potatoes peeled/cooked | 240 |
| | | 480 |
| | | 720 |
| | | 450 |
| P 03 | Baked potatoes | 1000 |
| P 04 | Chicken pieces(frozen) | 450 |
| | | 400 |
| P 05* | Cake | 500 |
| | | 600 |
| | | 2400 |
| P 06* | Apple pie | 2400 |
| P 07* | Quiche | 1000 |
| | | 200 |
| P 08** | Reheat soup | 400 |
| | | 600 |
| | | 250 |
| P 09** | Reheat plate | 350 |
| | | 100 |
| P 10** | Reheat sauce/stew | 200 |
| | | 300 |
| | | 200 |
| P 11 | Frozen Pizza | 400 |
| | | 600 |
| | | 300 |
| P 12* | Frozen oven chips | 400 |
| | | 500 |
| P 13 | Lasagna | 1600 |

Notes

- The programmes with a * are preheated. During preheating, the cooking time pauses and the preheating symbol is on. After preheating, you will hear an alarm and the preheating symbol will blink.
- The programmes with ** only use the microwave function.

Programme has ended

A signal sounds. The oven stops heating.

Changing the programme

Once you have started the programme, the programme number and weight cannot be changed.

Cancelling the programme

Touch the "CANCEL" key to cancel operation.

Changing the cooking time

If using automatic programmes, you cannot change the cooking time.

Defrosting programmes

You can use the 3 defrosting programmes to defrost meat, poultry and bread.

1. In waiting state, touch Δ key once to enter the Defrost function. The first programme number blinks in the screen.
2. Turn the parameter knob to select the programme number.
3. Touch the Δ key.
4. Turn the parameter knob to set the weight, cooking time will shown.
5. Touch the $\triangleright||$ key. The programme starts. You can see the cooking time counting down.

Notes

- Preparing food
 - Use food that has been frozen at -18 °C and stored in portion-sized quantities that are as thin as possible.
 - Take the food to be defrosted out of all packaging and weigh it. You need to know the weight to set the programme.
- Liquid will be produced when defrosting meat or poultry. Drain off this liquid when turning meat and poultry and under no circumstances use it for other purposes or allow it to come into contact with other foods.
- Ovenware
 - Place the food in a microwaveable shallow dish, e.g. a china or glass plate, but do not cover.
- When defrosting chicken and chicken portions (d 01), an audible signal will sound on two occasions to indicate that the food should be turned.
- Resting time
 - The defrosted food should be left to stand for an additional 10 to 30 minutes until it reaches an even temperature. Large pieces of meat require a longer standing time than smaller pieces. Flat pieces of meat and items made from minced meat should be separated from each other before leaving to stand.
 - After this time, you can continue to prepare the food, even though thick pieces of meat may still be frozen in the middle. The giblets can be removed from poultry at this point.

| Programme no. | Defrost | Weight range in kg |
|---------------|---------|--------------------|
| d 01* | meat | 0.10 - 1.50 |
| d 02* | poultry | 0.10 - 1.50 |
| d 03* | fish | 0.10 - 0.80 |






*During defrosting, place the food on the glass tray.

*If you hear 3 beeps, turn the food over.

Then touch start key to continue defrost.

Setting the pre-set cooking

More flexibility and convenience: The appliance can be programmed to preset the cooking end time and duration.

1. In waiting state, touch the  key. The  symbol lights up in the display and the hour figures will flash.
2. Turn the parameter knob to set the hour figures. The input time should be within 0--23.
3. Touch  to confirm, the minute figures will flash.
4. Turn the parameter knob to set the minute figures. The input time should be within 0--59.
5. Touch  to finish the pre-set time setting.
6. Setting the type of heating and temperature.
7. Touch  to finish the setting.

The pre-set time has elapsed

An audible signal sounds. The oven starts cooking.

Specifications

Before setting the pre-set cooking, the clock must have been set. Kitchen Timer can not be set after the pre-set cooking setting.

Setting the time-setting options

Your oven has various time-setting options. You can use the "TEMP/TIME" key to call up the menu and switch between the individual functions. A time-setting option that has already been set can be changed directly with the parameter knob .

Setting the cooking time

The cooking time for your meal can be set on the oven. When the cooking time has elapsed, the oven switches itself off automatically. This means that you do not have to interrupt other work to switch off the oven. The cooking time cannot be accidentally exceeded.

The oven starts. The cooking time counts down in the display.

The cooking time has elapsed

An audible signal sounds. The oven stops heating.

Setting the clock



Refer to *Before using the appliance for the first time*.

Changing the clock

Repeat the steps of *setting the clock*.

Setting the timer

You can use the timer as a kitchen timer. It runs independently of the oven. The timer has its own audible signal. In this way, you can tell whether it is the timer or a cooking time which has elapsed.

1. In waiting state. Touch  key to enter kitchen timer. "00:00min " will flash.
2. Turn the parameter knob to set the timer time.
3. Touch  key to start timer.

Childproof lock

The oven has a childproof lock to prevent children switching it on accidentally.

The oven will not react to any settings. The timer and clock can also be set when the childproof lock has been switched on.

Switching on the childproof lock

In waiting state, touch and hold the LIGHT key for approx. 3 seconds.

There will be a long beep and the  symbol appears in the display.

The childproof lock is activated.

Switching off the childproof lock

In locked state, touch and hold the LIGHT key for approx. 3 seconds.

There will be a long beep and the  symbol goes out in the display.

The childproof lock is deactivated.

Care and cleaning

With careful care and cleaning your microwave oven will retain its looks and remain good order. We will explain here how you should care for and clean your appliance correctly.

 Risk of electric shock.!

Penetrating moisture may cause an electric shock. Do not use any high-pressure cleaners or steam cleaners.

 Risk of burns!

Never clean the appliance immediately after switching off. Let the appliance cool down.

 Risk of serious damage to health!

Microwave energy may escape if the cooking compartment door or the door seal is damaged. Never use the appliance if the cooking compartment door or the door seal is damaged. Contact the after-sales service.

Notes

- Slight differences in colour on the front of the appliance are caused by the use of different materials, such as glass, plastic and metal.
- Shadows on the door panel which look like streaks, are caused by reflections made by the oven light.
- Unpleasant odours, e.g. after fish has been prepared, can be removed very easily. Add a few drops of lemon juice to a cup of water. Place a spoon into the container as well, to prevent delayed boiling. Heat the water for 1 to 2 minutes at maximum microwave power.

Cleaning agents

To ensure that the different surfaces are not damaged by using the wrong cleaning agent, observe the information in the table. Do not use

- sharp or abrasive cleaning agents,
- metal or glass scrapers to clean the glass in the appliance door.
- metal or glass scrapers to clean the door seal,
- hard scouring pads and sponges,
- cleaning agents with high concentrations of alcohol.

Wash new sponge cloths thoroughly before use.

Allow all surfaces to dry thoroughly before using the appliance again.

| Area | Cleaning agents |
|--------------------------------------|---|
| Appliance front | Hot soapy water: Clean with a dish cloth and dry with a soft cloth. Do not use glass cleaners or metal or glass scrapers for cleaning. |
| Appliance front with stainless steel | Hot soapy water: Clean with a dish cloth and dry with a soft cloth. Remove flecks of limescale, grease, starch and albumin (e.g. egg white) immediately. Corrosion can form under such residues. Special stainless steel cleaning agents can be obtained from the after-sales service or from specialist shops. Do not use glass cleaners or metal or glass scrapers for cleaning. |
| Cooking compartment | Hot soapy water or a vinegar solution: Clean with a dish cloth and dry with a soft cloth. If the oven is very dirty: Do not use oven spray or other aggressive oven cleaners or abrasive materials. Scouring pads, rough sponges and pan cleaners are also unsuitable. These items scratch the surface. Allow the interior surfaces to dry thoroughly. |
| Recess in cooking compartment | Damp cloth: Ensure that no water seeps through the turntable drive into the appliance interior. |
| Wire racks | Hot soapy water: Clean using stainless steel cleaning agent or in the dishwasher. |
| Door panels | Glass cleaner: Clean with a dish cloth. Do not use a glass scraper. |
| Seal | Hot soapy water: Clean with a dish cloth, do not scour. Do not use a metal or glass scraper for cleaning. |